

Contact Details

Please note that some of the contact details on this PDF document may not be current.

Please use the following details if you need to contact us:

Telephone: 0844 879 3588

Email: customer.services@gdcgroup.co.uk

The customer support section of our website also features a wide range of information which may be of use to you and is available 24 hours a day. It includes:


- Operating and installation instructions
- Easy 'How to use' guides for storage heaters
- Service and repairs
- Where to buy our products
- Literature downloads
- Heating requirement calculator

Visit - www.dimplex.co.uk/support

Press Button Delay Timer - Model No. PX01001

T0105/004/A

Main Dimensions

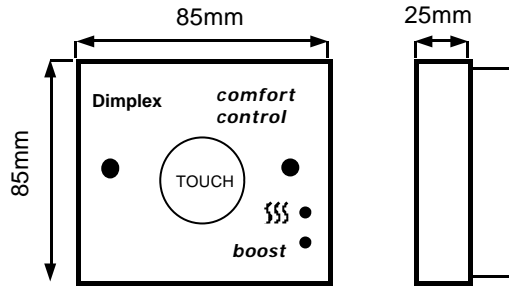

Ensure 500mm clearance from any heat source or draught.

Safety Warnings

1. WARNING: DO NOT USE THIS APPLIANCE IN THE IMMEDIATE SURROUNDINGS OF A BATH, A SHOWER OR SWIMMING POOL
2. WARNING: DO NOT USE WHERE EXCESSIVE DUST OR MOISTURE IS PRESENT
3. WARNING: FOR USE IN NORMAL POLLUTION SITUATIONS ONLY

General Description

The PX01001 timer/thermostat can be used in conjunction with heating appliances. They may be flush or surface mounted using a standard 25mm box. The control is rated at 16A (250VAC) and can be used in conjunction with heating appliances with a maximum total input of 13 A resistive L.C. 230V - 50Hz. The controller cannot be used with a Quartz heater without a suitable in-line contactor. Control action: Type 1B

Operating Instructions

The PX01001 controls the room temperature by interrupting the power supply to the appliance, therefore the appliance should always be switched on and its thermostat set to maximum temperature. Note this will not be reached if the pre-determined maximum level is below that of the appliance thermostat setting.

boost When the comfort mode is activated by pressing the centre of the control face, the green light illuminates. The comfort mode allows the room to be heated to a pre-determined temperature for a pre-determined time period.

⏏ The red light indicates that the heater is operating. Note that the heater will remain on for a minimum of 1 minute.

The red light may also be illuminated in the set back mode when the PX01001 switches the heater on to maintain the predetermined background temperature.

Installation

Before undertaking installation work, ensure the electricity supply is disconnected from any relevant fixed wiring.

1. The control and heater should be installed in compliance with the IEE Wiring Regulations





2. The location of the control is important, it will not function correctly if above or within 500mm of a heat source or draught. Care must also be taken not to obscure the slots at the top or bottom of the control and that it is not exposed to direct bright sunlight or close to a lamp fitting. Best temperature accuracy will be achieved by mounting on an internal wall or partition.
3. The pattress boxes (not provided) should have a depth of at least 25mm. Plastic pattress boxes with vertical pillars are not suitable.

Vertical tabs in metal pattress boxes should be removed. Ensure all entries into the pattress boxes are sealed to prevent draughts.
4. Before fitting to the mounting box setback temperature, comfort temperature and comfort period must be selected. To do this, adjust the appropriate dial on the reverse of the PCB.
5. The supply cable is not provided and should therefore be selected to suit the appliance.


Warning: Although the control does not need an earth, the appliance probably does. Ensure that the mounting box is fitted with an earth terminal for earth continuity to the appliance.
6. To connect the control in circuit wire in to the clearly marked terminal block on the rear of the controller. The control must only be connected via fixed wiring.
7. Secure the control to the pattress box such that there are no gaps between the controller and wall or pattress box.

Note: If tamperproof screws are required they should be M3 x 40mm long, counter sunk with a head diameter of no more than 6.5mm.


Installation contd..

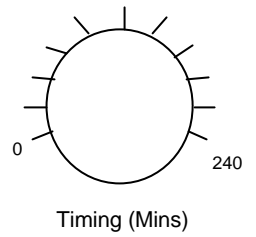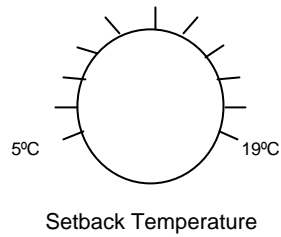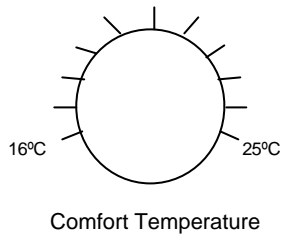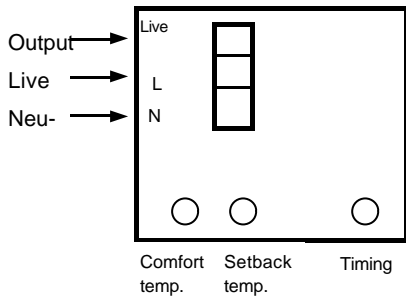

Wiring Diagram

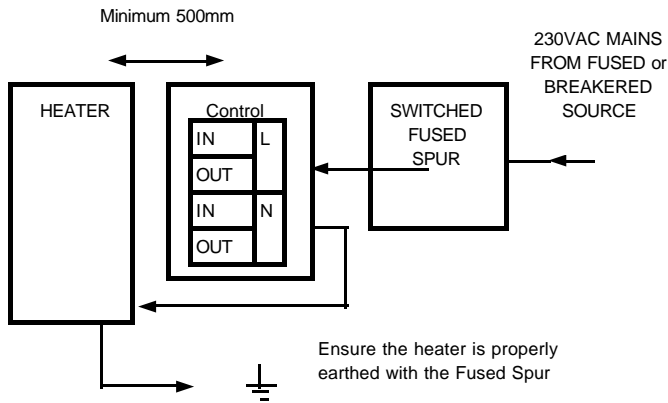

Alternative

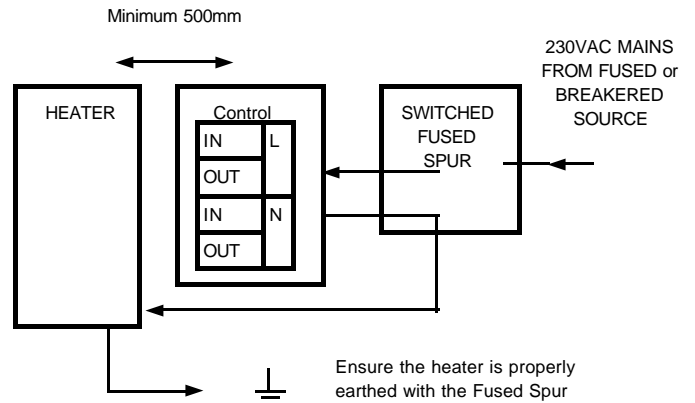

General Cleaning

WARNING
BEFORE UNDERTAKING CLEANING WORK ON THE CONTROLLER OR APPLIANCE IMMEDIATELY DISCONNECT THE ELECTRICITY SUPPLY BY SWITCHING OFF AT THE ADJACENT DOUBLE POLE SWITCH.

The outside of the appliance should be wiped over with a soft damp cloth and then dried. Do not use detergents or abrasives.

After Sales Service

Your Dimplex Comfort Control is guaranteed for one year from date of purchase. We undertake to exchange or repair free of charge within this period, any part found to be defective.

Should you require after sales service, please get in touch with the supplier through whom you purchased the appliance, or your nearest Service Agent.

Please do not initially return a faulty appliance or part of an appliance to us as this may result in transit damage and/or delay in providing service. Let us know your difficulty quoting the model number and series of the appliance. We will then take the appropriate action.