



MECHANICAL TIMER, 24 HOUR - USER GUIDE


Vogue Combi c26, c32, c40

When replacing any part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require.

Do not use reconditioned or copy parts that have not been clearly authorised by Ideal.

Mechanical Timer, 24 Hour

Suitable for the following boilers:
Vogue Combi

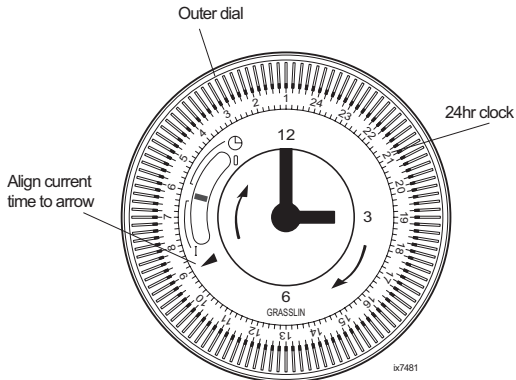

SETTING UP

The outer dial should be set to the current time. Rotate the dial slowly in a clockwise direction, until the correct hour is aligned with the arrow printed on the dial.

Note that the outer dial is printed with the 24hr clock

8.00am = 8 on the dial,

8.00pm = 20 on the dial.

Clock hands will allow for fine adjustment of the current time setting of the dial.

Do not attempt to rotate the dial in an anti-clockwise direction.



The national regulations and respective safety instructions are to be observed.
Interferences and changes to the device will lead to cancellation of the warranty.



PROGRAMMING SWITCHING TIMES

Set tappets to outer edge for ON periods and set tappets to inner edge for OFF periods.

The example shown has been set with 2 on periods.

ON at 9.00am. OFF at 1.00pm. (13 hours)


ON at 6.00pm. (18 hours) OFF at 10.00pm (22 hours)

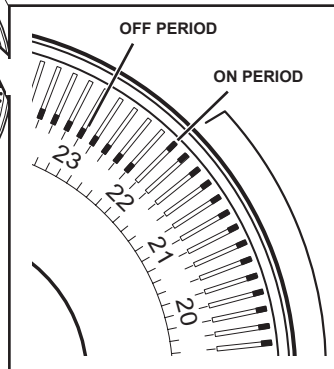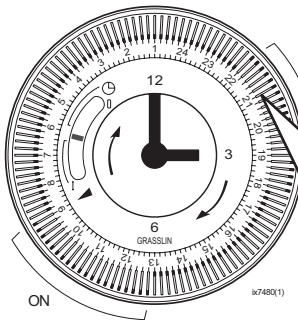

FIXED OFF

TIMED
SWITCHES ON & OFF
DEPENDANT ON
POSITION OF TAPPETS

FIXED ON

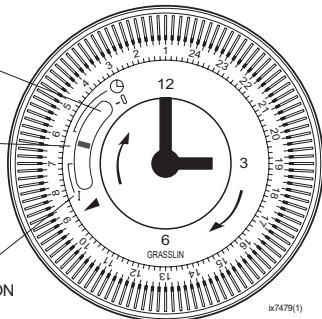

MANUAL SWITCH OPERATION

The manual switch will provide Fixed On / Timed / Fixed Off control, thereby allowing manual control of the output without disrupting the timed (tappet) settings.

August 2012 UIN 208945 A01

Ideal Stelrad Group pursues a policy of continuing improvement in the design and performance of its products. The right is therefore reserved to vary specification without notice.

Ideal Boilers Ltd., P.O. Box 103, National Ave, Kingston Upon Hull, HU5 4JN.
Tel. 01482 492251 Fax. 01482 448858. Registration No. London 322 137.

